Product Usage Guide




Postures | Contact Points | Stretches




Table of Contents

Adjustment DirectionsPa	age 3
Posture Guide	4-8
Leaning Position	4
Angled Perch Position	5
Stool Sitting Position	6
Full Sitting Position	6
Forward Lean Position	7
Break Time	8
Stretching Guide	9-10
Hamstring Stretches	9
Quadricep Stretches	10
How Not to Use the Product	11

Directions: Adjustment & Levers

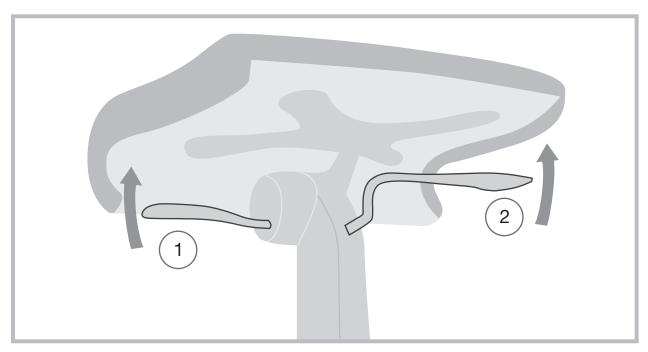


- 1 Seat Rotation Lever: Located under the left side of the seat. Pull lever up to tilt seat angle.
- 2 Height Adjustment Lever: Located under the right side of the seat. Pull up to raise or lower seat.

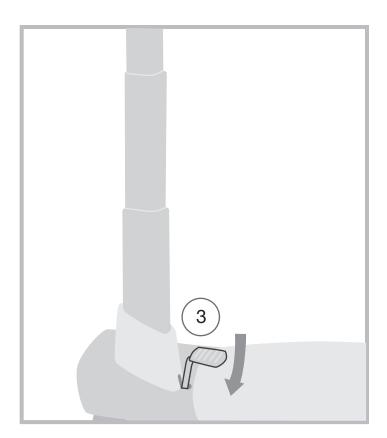


Height Adjustment Pedal:
Located near feet on the
base of the post. Press
down with feet to adjust
seat height.



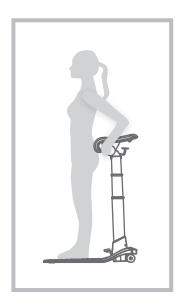


Posture Guide: Standing Position

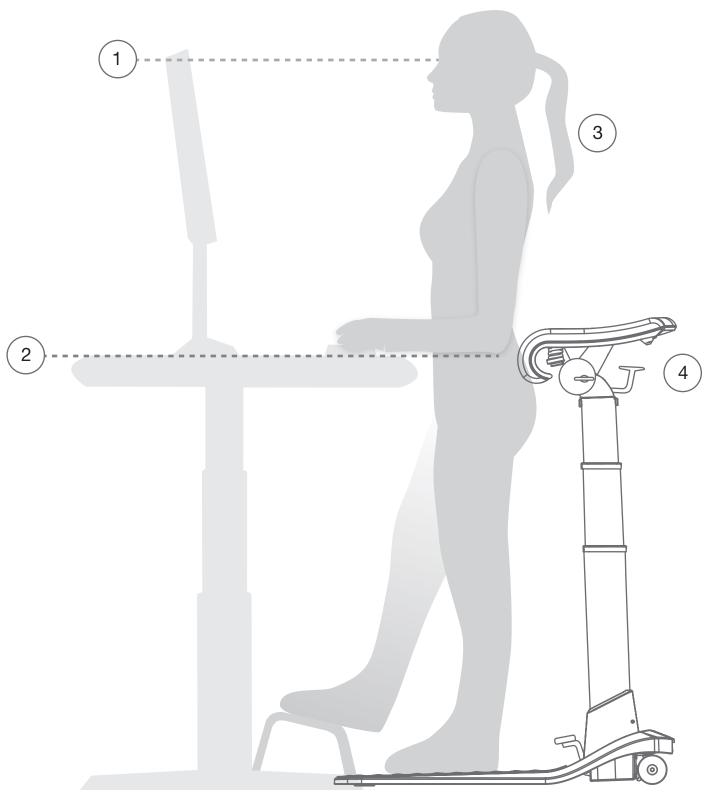

Tip: Try a footstool

Posture Guide: Angled Perch Position

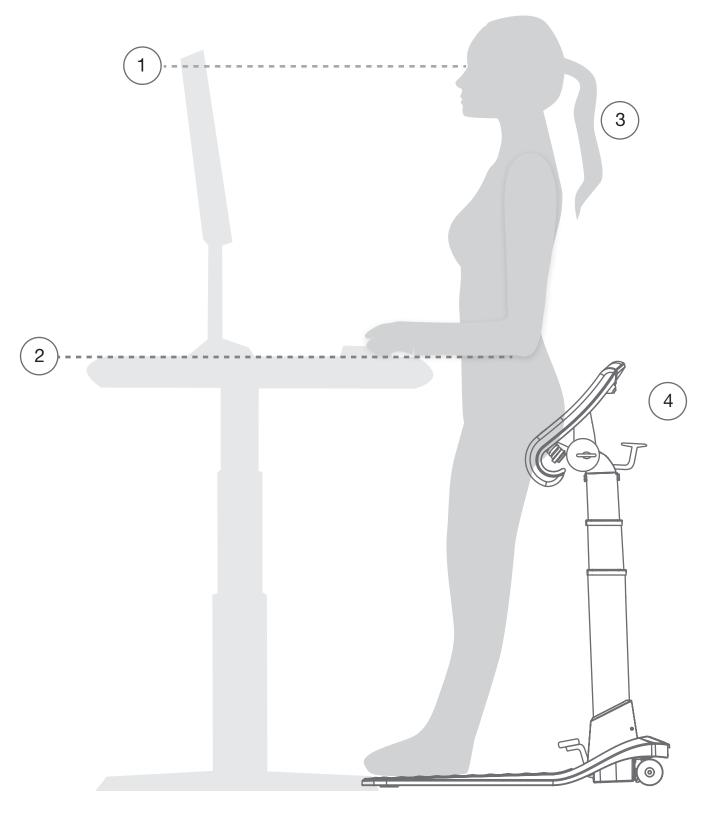

Tip: For full support in this position, allow end of seat to provide upward lift instead of leaning further up on the seat pad.


Top of Screen at Eye Level

2 Elbow at Desktop Level

Maintain Upright
Back and Neck

 
Seat at 45°
Angle

Posture Guide: Full Sitting Position

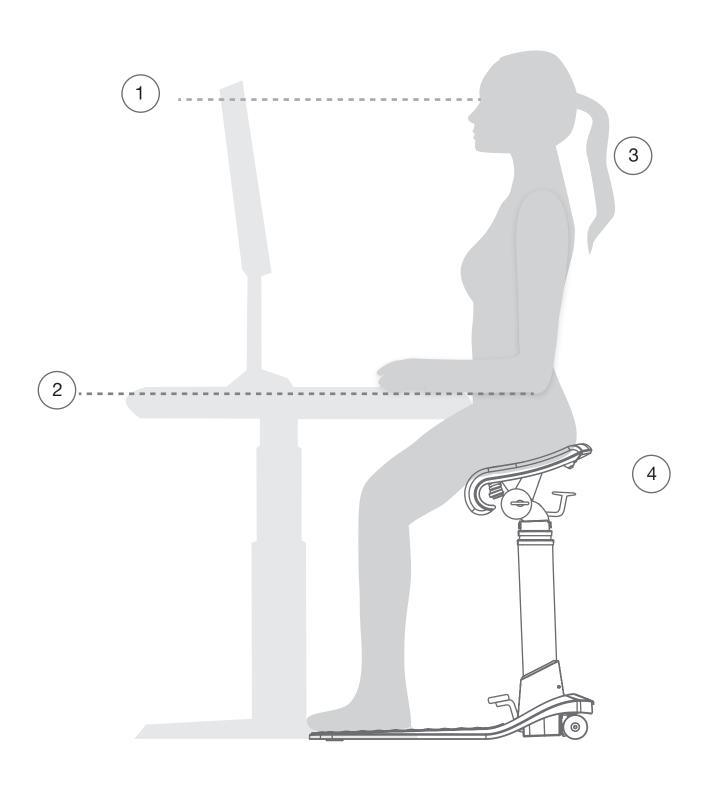









Posture Guide: Forward Lean

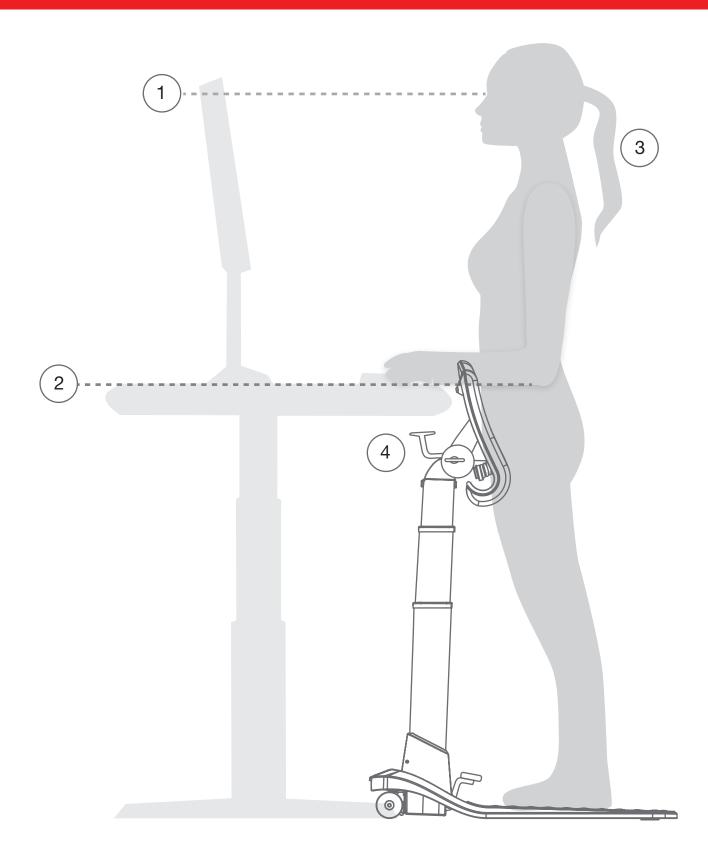


- Top of Screen at Eye Level
- 2 Elbow at Desktop Level
- Maintain Upright
 Back and Neck


Posture Guide: Break Time

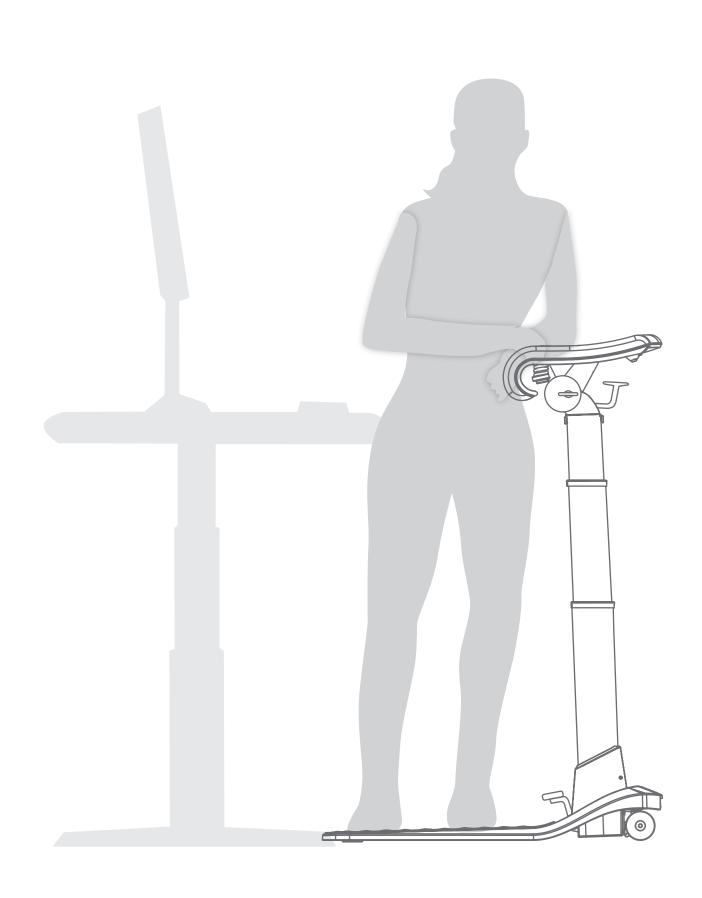

Stretching Guide: Hamstring Muscles

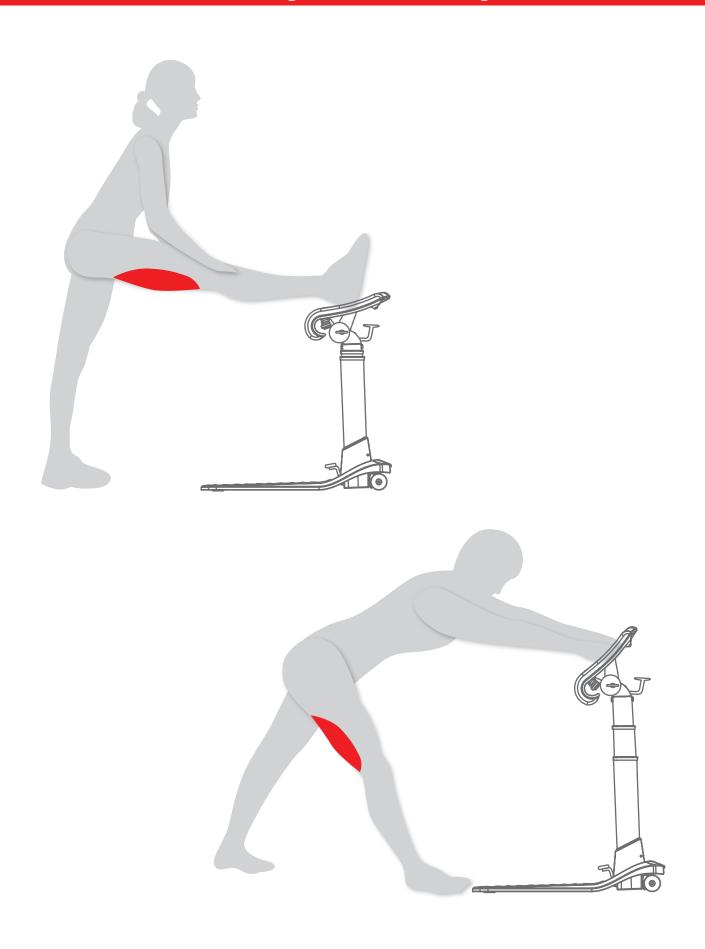

Stretching Guide: Quad Muscles

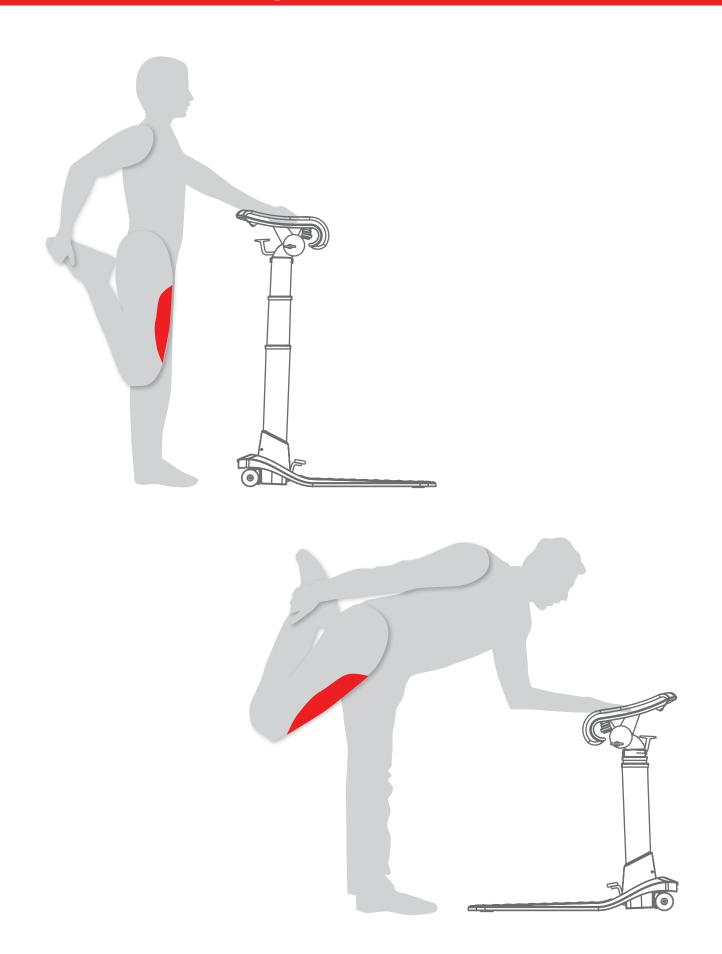

How Not to Use the Product

